

Sentinel QR Auto Launch

For Standard Shipments

1

 

Collect Sentinels for shipment. Press the button to ensure green LED. If not green, press and hold until flashing green and release.



Keep Sentinels <30m to Sentry
600 gateway > 15 min


2

- a. Login to az.ccis.se
- b. Select "Cloud Launch"

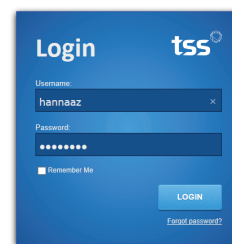



3

- a. Scan SAP QR Code
- b. Scan Sentinel Qr Code or type in Sentinel id's

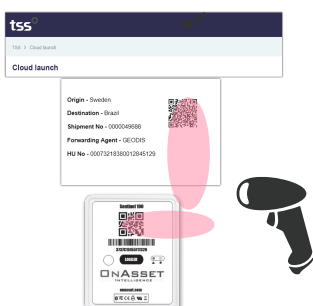

4

 - a. Verify correct number of id's listed
- b. Click "Launch"

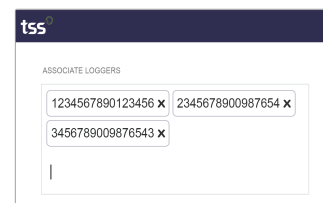

5

Attach to shipment. The Sentinel monitor contains lithium batteries. Please follow local procedures.



Placement of temperature monitors on the product is outlined in the AZ Quality and Compliance Manual procedure 8-P27