

## **Sentinel & Sentry Manual Launch**


## For Diamond Shipments

The Sentinel temperature monitor with Sentry In-Transit is used for Diamond Shipments



a. Login to az.ccis.se

b. Select "Cloud Launch"

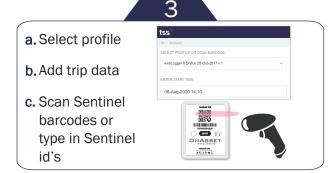

a. Verify correct number of id's listed

b. Click "Launch"

tss

| tss|

Sentry600 In-transit must have been charged >15 hours before use

Check on the display power is on, and the monitor is switched on before attaching it to the pallet

Attach both to shipment.
The Sentinel and Sentry600
In-Transit contain lithium batteries.
Please follow local procedures.

Placement of temperature monitors on the product is outlined in the AZ Quality and Compliance Manual procedure 8-P27