

Gateway Installation Guide

Sentry 600

1

Verify content

The box contains:

- Sentry600 Gateway
- 2x Sentinel
- Mounting bracket
- USB power cable
- Power adaptor



2

Placement

Place the gateway:

- Close to (within 40 meters) the inbound/outbound area where the loggers are launched/stopped
- Close to a window or a door for mobile coverage



3

Installation

- Connect gateway to a power outlet and make sure it is always connected
- Confirm "Power On"
- Wait until battery is charged to 30% or more before proceeding with next step 4.




4

Verify with Sentinel

There are 2 Sentinels in box for connection test purposes only. For launch see User Guide at <https://help.astrazeneca.tssab.com/az/>


The gateway picks up all Sentinels in range for download.

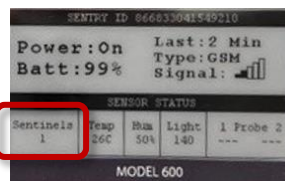

5

Verify reporting

- Wait 15 minutes
- Check "Last: .." value

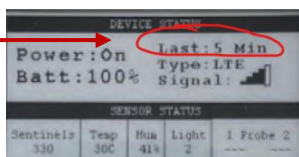

- Confirm connecting and reporting:
 - If value is within **0-15** minutes it is **Working**
 - If not (more than 15 minutes), go back to step 2 above, and find better coverage

5

Confirm Installation

When installed, send e-mail to: customer.service@tss.se

Please include:

- Subject "Sentry Gateway Installed"
- Site name
- Sentry Gateway ID Serial Number
- Photo of the installation and surrounding area (if possible). Include map if available.



Gateway Installation Guide

Sentry 600

Display Indicators



- Not fully charged
- Fully charged*

*Light will switch to red when transmitting even if the Battery is at 100%

1. Power On/Off
2. Battery %
3. Last time of report
4. Type of signal
5. Signal strength
6. Serial number
7. Number of Sentinels loggers in range
8. Last recorded temperature
9. Last recorded humidity
10. Last recorded light (in Lux)
11. Not in use
12. Not in use
13. ON/OFF Button

For additional support please visit our support site www.help.tss.se/az