


Sentinel Upload

1

Locate the Sentinel and stop the monitor by pressing and holding the button for approximately 3 seconds, until the LED is flashing **red**. When the LED is flashing **red**, release the button immediately.*


Keep the sentinels <30m to Sentry gateway > 15 min

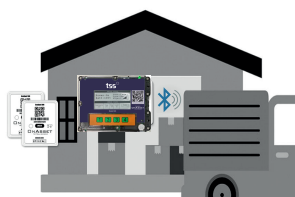

*If the LED is already **red**, press and hold the button for 3 seconds until it becomes **green**, then release. Repeat the button press until the LED becomes flashing **red** again, then release.


2

- Login to az.ccis.se
- Select "TempViaNet"
- Select "SEARCH"

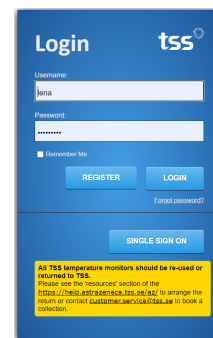


3

- Enter or scan shipping, order or delivery number
- Verify Sentinel upload complete

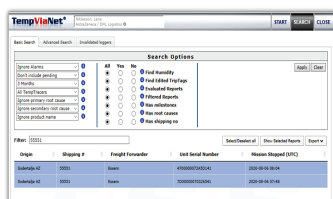

4


Review Sentinel alarm/no alarm status. Click 'select all' + 'show selected reports'

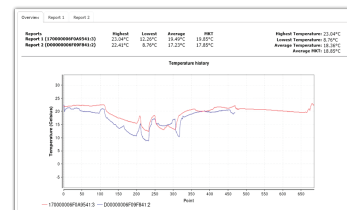

5

Temperature alarm triggered

If an alarm is received please make sure to follow the local Quality Assurance processes to report the temperature excursion.

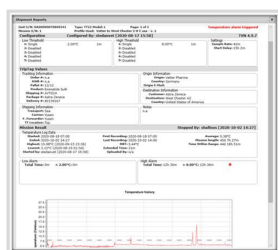

6

*Reusable device!
Please transfer to outbound or await pickup service for recycling.*



If no outbound AstraZeneca shipments, pickup will be scheduled to collect your Sentinels on a regular basis. Please store safely.